


**PROSOCO R-GUARD® Air & Water-Resistive Barrier
Window Head Flashing**

Detail No.: 20.23b

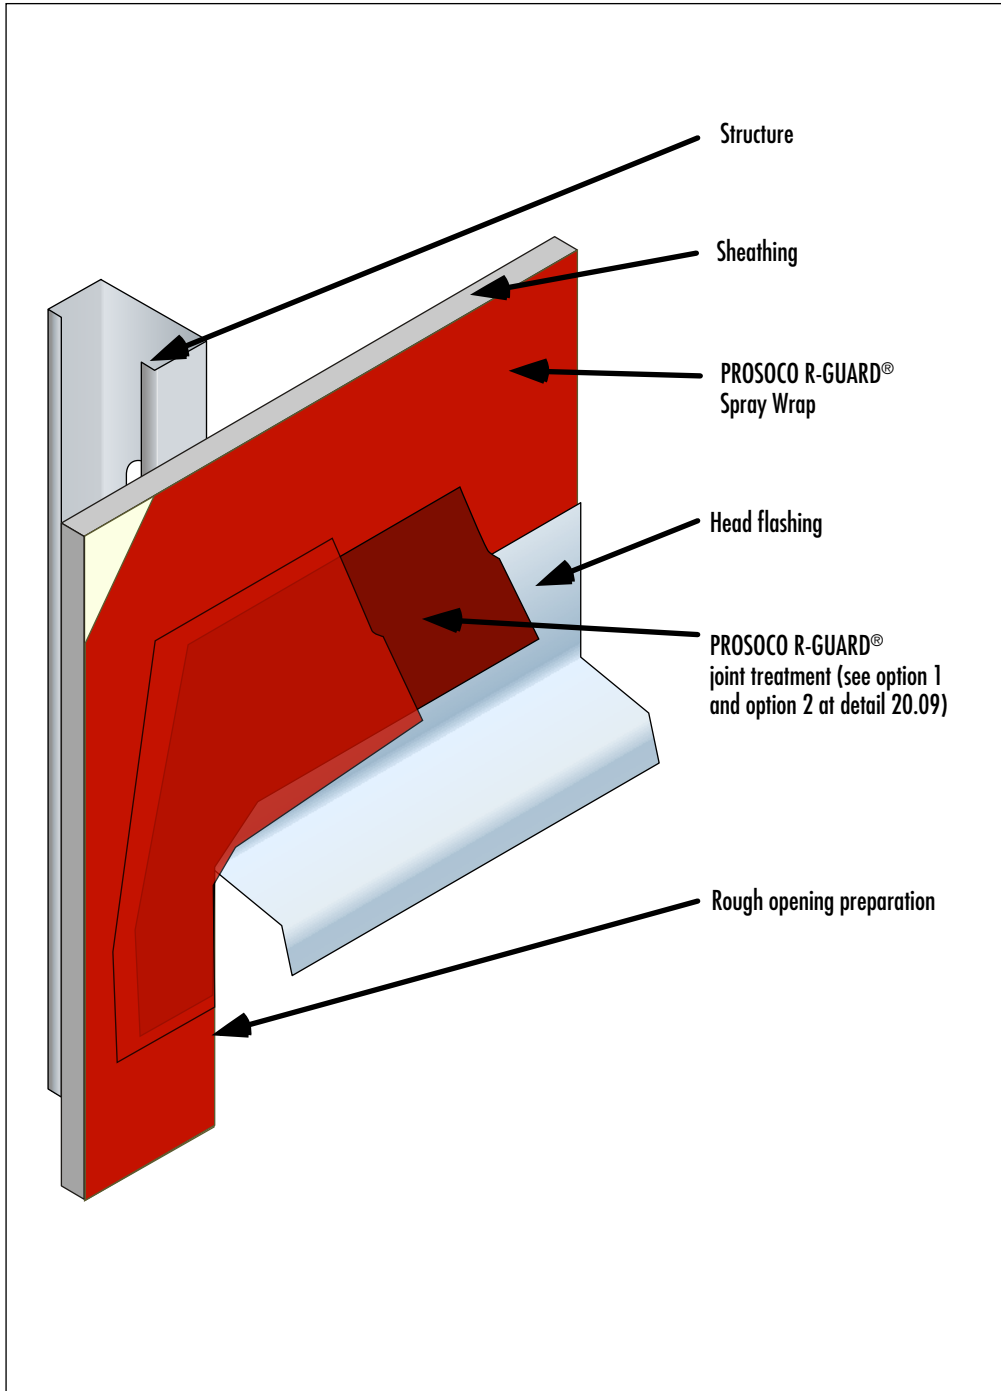

Notes:

- 1] Prepare the rough opening as noted in detail 20.24 or detail 20.27.
- 2] Provide head flashing as required by local codes and window manufacturer.
- 3] Coordinate installation of moisture barrier and flashing with window installer and other related trades.