


PROSOCO R-GUARD™ Air & Moisture Barrier for Rough CMU

Detail No.: 20.01

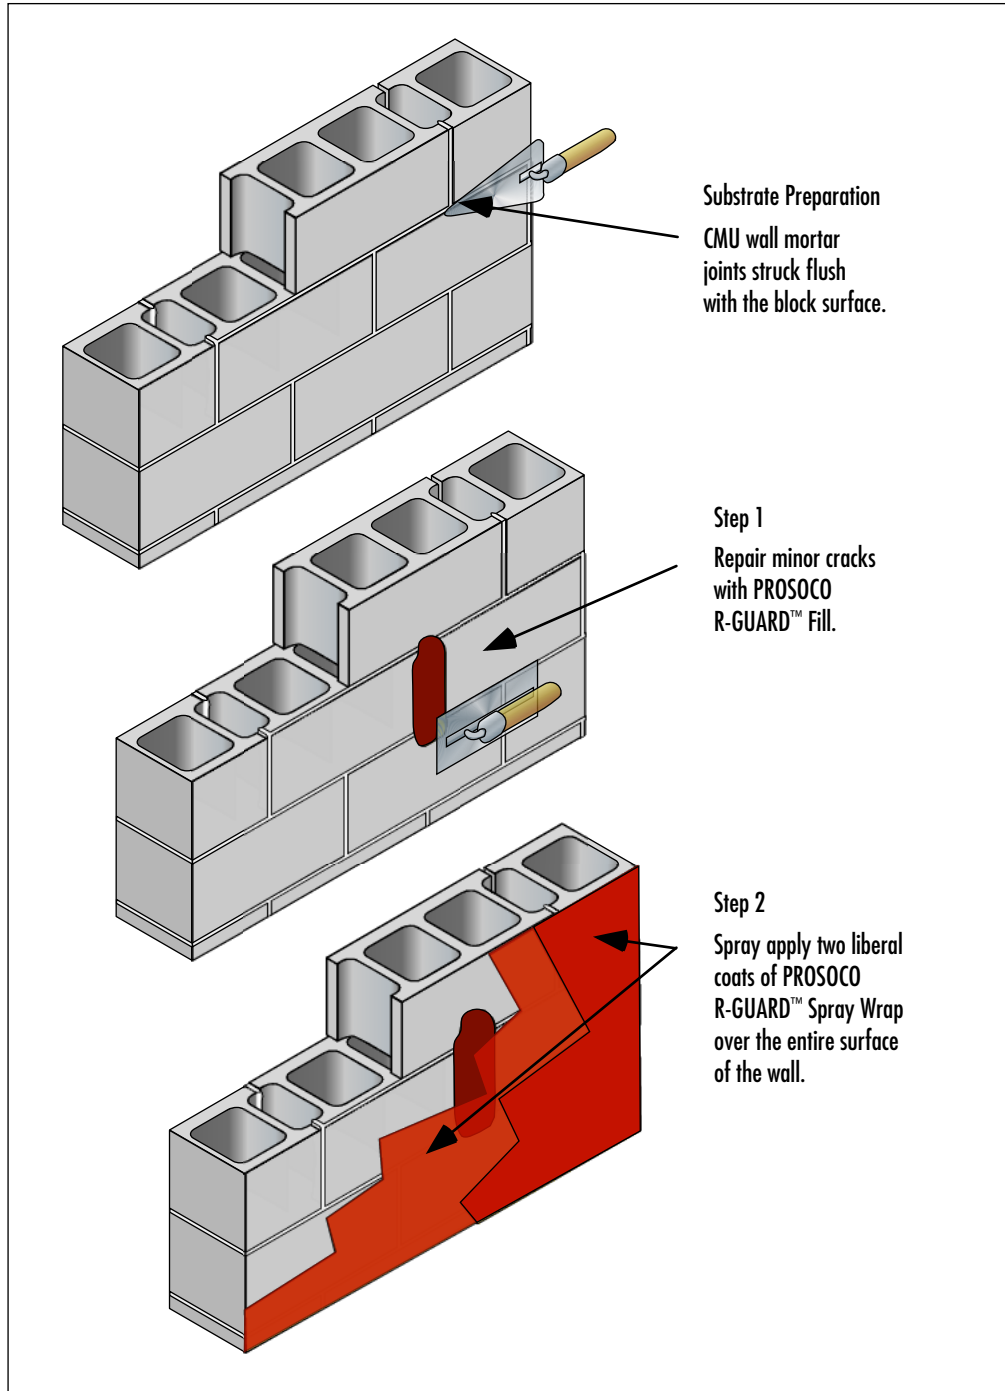

Notes:

- 1] Prepare the CMU wall by:
 - striking the mortar joints flush (preferable),
 - removing mortar droppings or other debris on the surface,
 - cleaning dirt, efflorescence or other materials that may affect the bond of the coatings materials,
 - fill any cracks or voids greater than 1/2 inch with mortar or similar material.
- 2] Repair minor cracks or voids with PROSOCO R-GUARD™ Fill.
- 3] Spray, brush or roller apply a coat of PROSOCO R-GUARD™ Spray Wrap (10 wet mils minimum) over the entire surface of the wall. Apply a second coat (10 wet mils minimum) after the first application is dry. For spray application, backroll each coat after spraying.