


**PROSOCO R-GUARD™ Air & Moisture Barrier
Alternate Brick Anchor Attachment**

Detail No.: 20.03

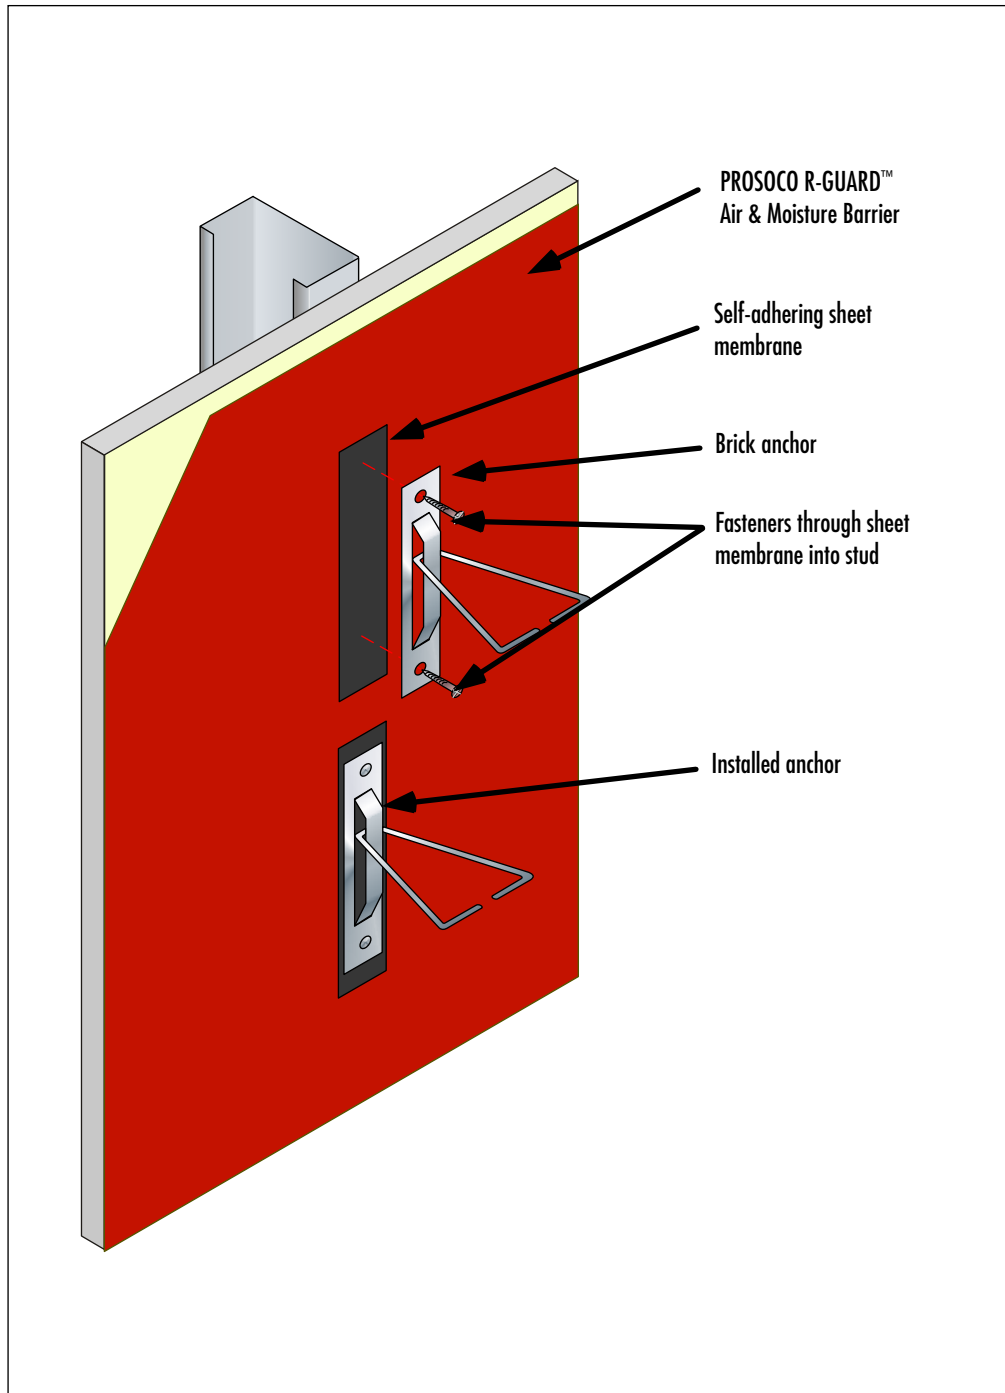

Notes:

- 1] Install PROSOCO R-GUARD™ over sheathing.
- 2] Install suitable self-adhering sheet barrier membrane such as SBS modified bitumen, or sheet membrane flashing as per membrane manufacturer's instructions.
- 3] Place anchor over membrane and secure to the stud through the membrane.