


PROSOCO R-GUARD™ Air & Moisture Barrier Rough Opening Preparation

Detail No.: 20.23a

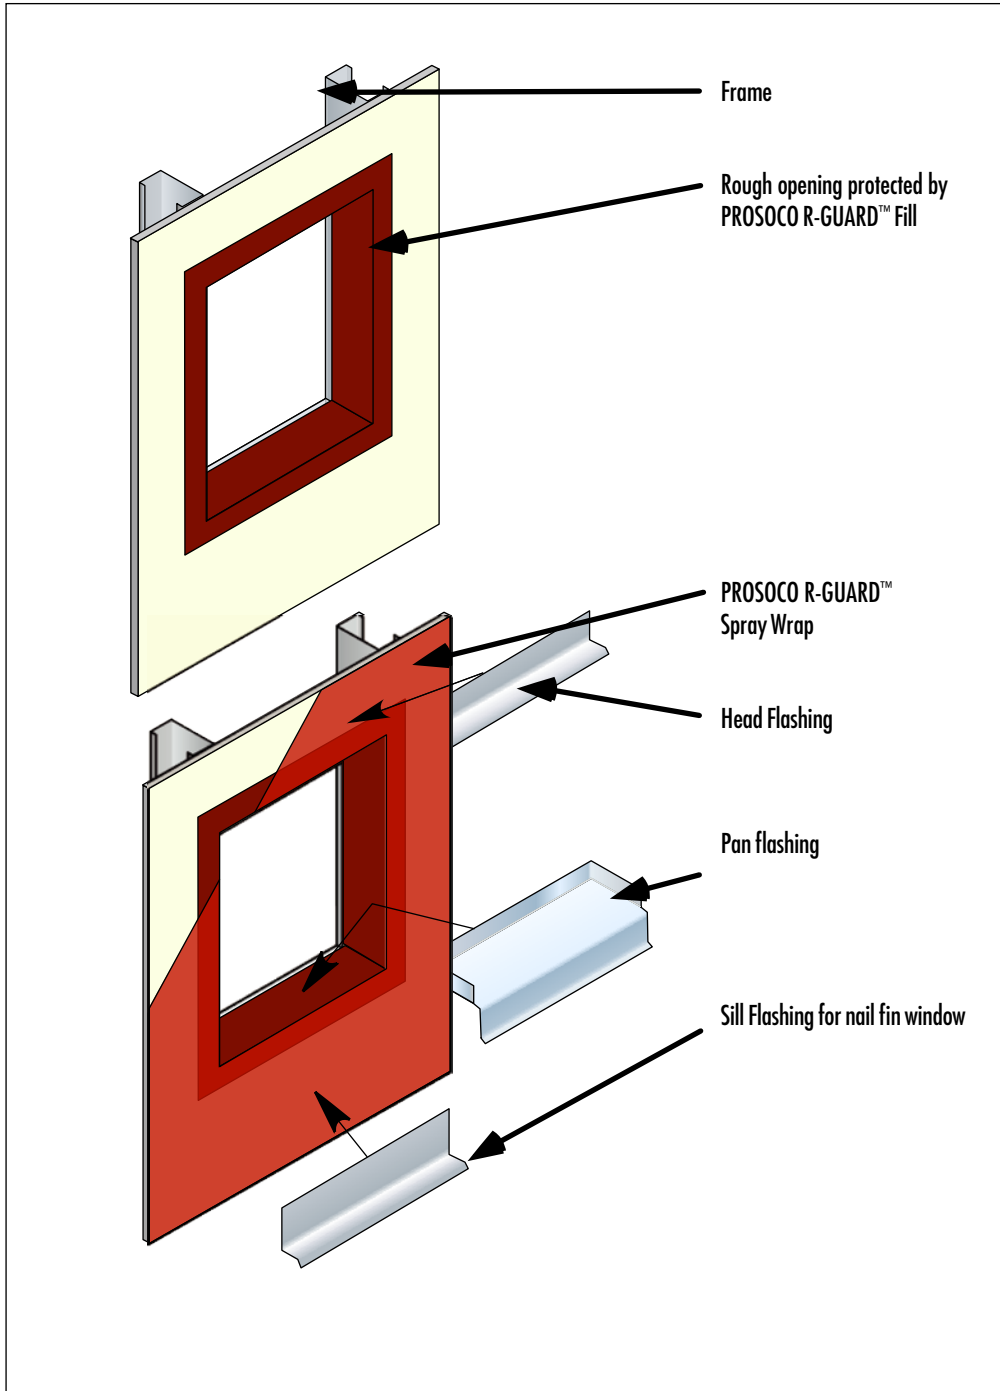

Notes:

Prepare opening prior to the installation of the window or mechanical equipment. Coordinate installation with other trades.

1. Wrap the rough opening as per Detail 20.24.

2. Once the PROSOCO R-GUARD™ Fill has dried, apply PROSOCO R-GUARD™ Spray Wrap to the rough opening and the entire wall surface.

3. Incorporate head flashing as noted in PROSOCO Detail 20.23b.

4. For box windows, incorporate a pan flashing as noted in PROSOCO Detail 20.23c.

5. For nail-fin windows, incorporate a sill flashing under the window as noted in PROSOCO Detail 20.23d.