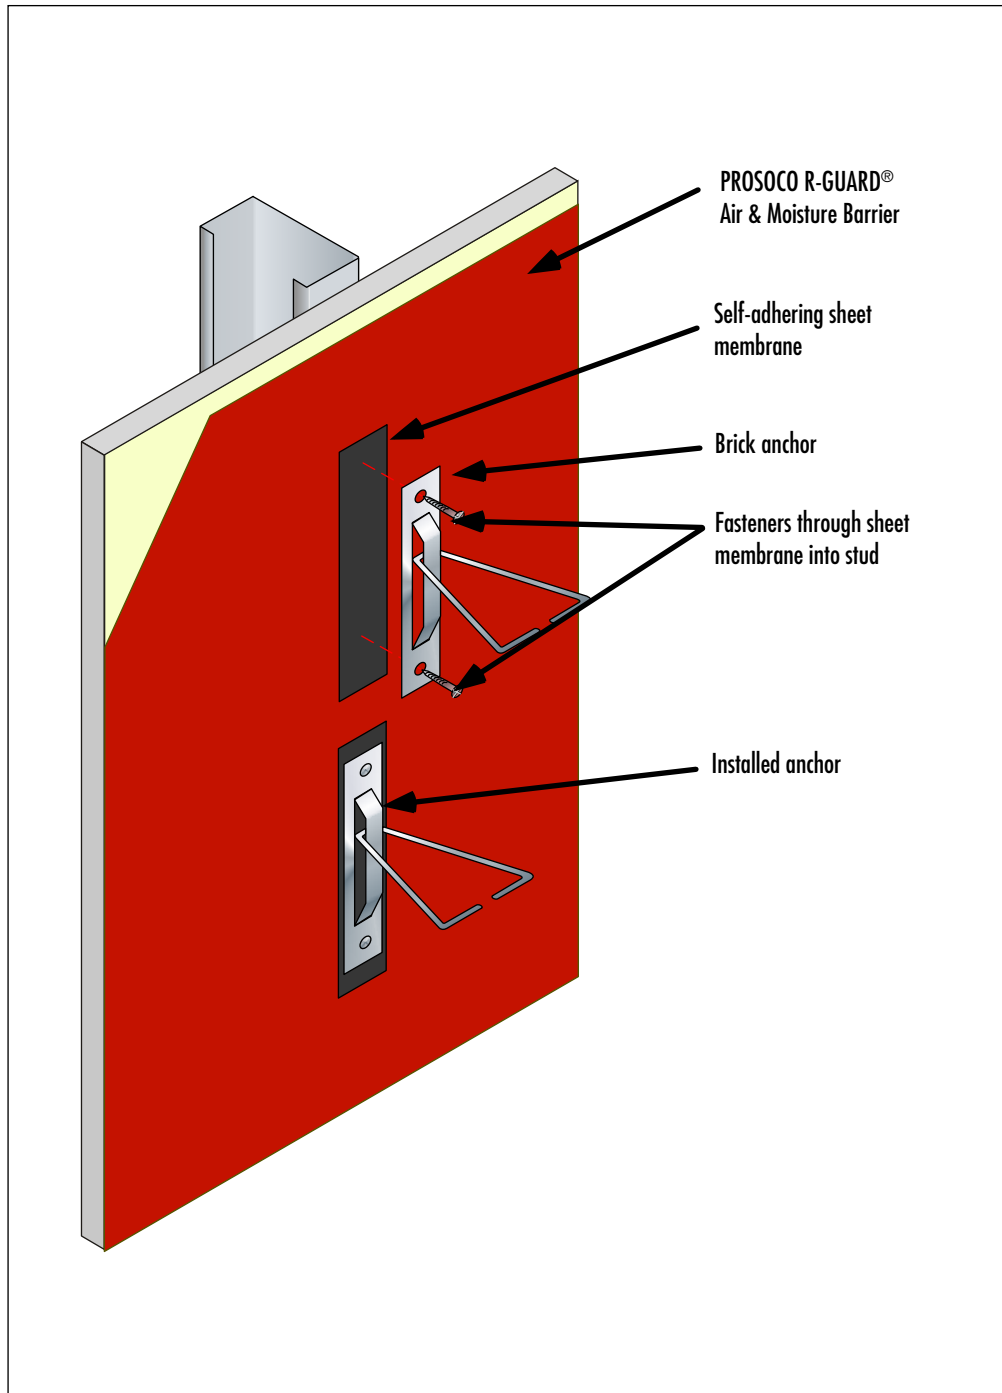


**PROSOCO R-GUARD® Air & Water-Resistive Barrier
 Alternate Brick Anchor Attachment**
Detail No.: 20.03

Notes:

- 1] Install PROSOCO R-GUARD® over sheathing.
- 2] Install suitable self-adhering sheet barrier membrane such as SBS modified bitumen, sheet membrane flashing or R-GUARD Transition Membrane as per membrane manufacturer's instructions.
- 3] Place anchor over membrane and secure to the stud through the membrane.