


PROSOCO R-GUARD® Air & Water-Resistive Barrier with alternative R-GUARD Spray Wrap Joint Treatments

Detail No.: 20.09

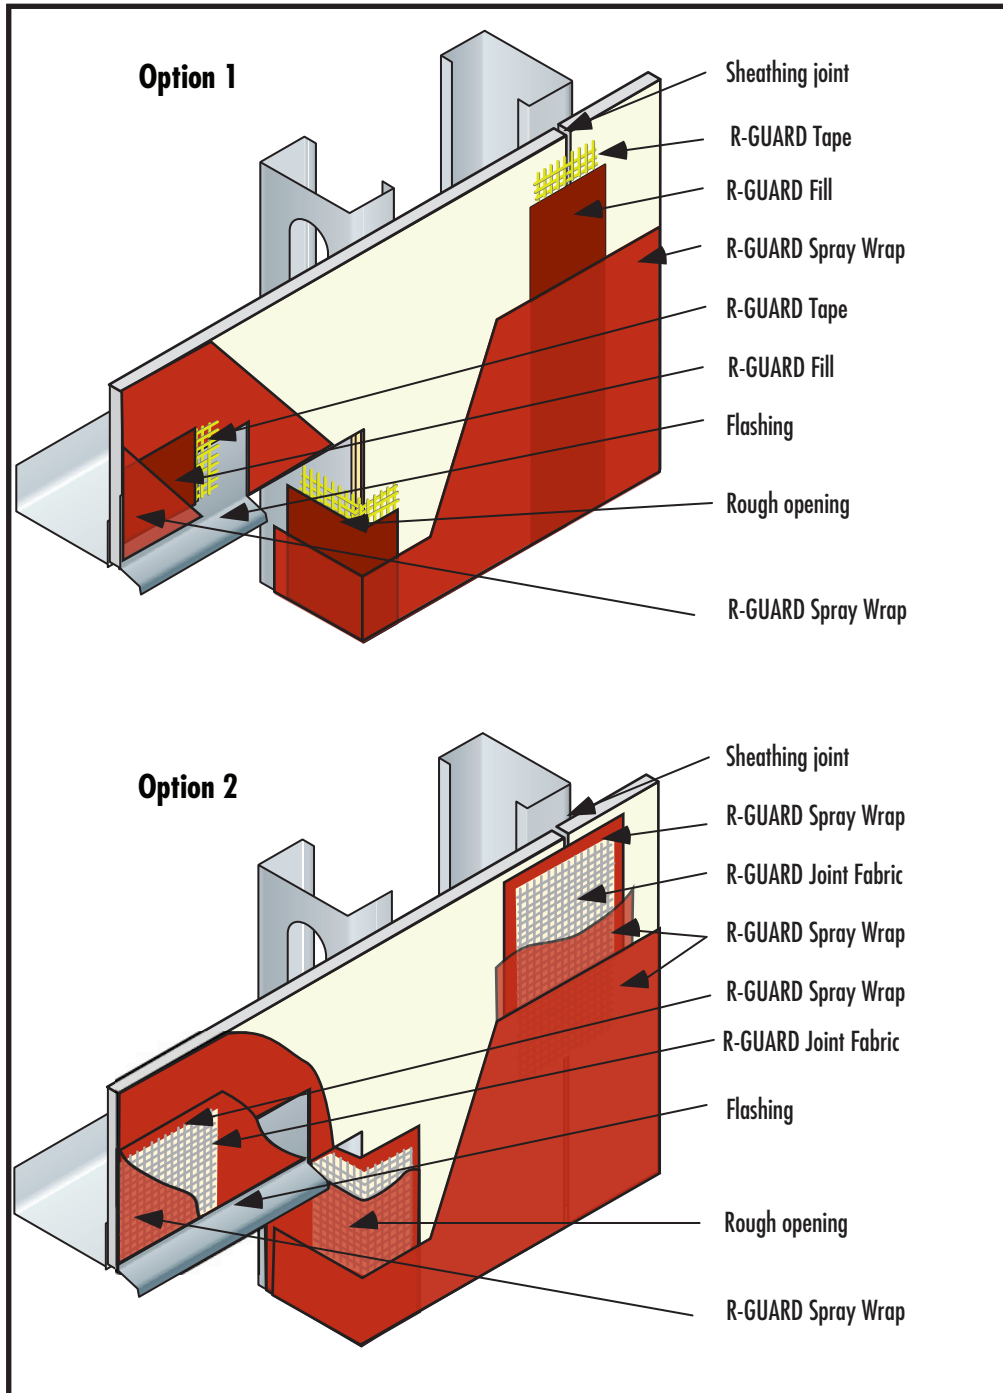

Notes:

Option 1

1. Apply R-GUARD Tape over sheathing joints and around rough openings and trowel R-GUARD Fill over mesh.
2. Coat entire surface with R-GUARD Spray Wrap.
3. Apply R-GUARD Tape over weep screed, head flashing, roof sidewall step flashing and similar conditions and trowel R-GUARD Fill over mesh.
4. Apply R-GUARD Spray Wrap over the splice strip of R-GUARD Fill/Tape.

Option 2

1. Spray, brush or roller apply R-GUARD Spray Wrap liberally over the sheathing joints and around the rough openings.
2. Immediately embed R-GUARD Joint Fabric into the R-GUARD Spray Wrap with a trowel, brush or putty knife
3. Apply additional R-GUARD Spray Wrap over the R-GUARD Joint Fabric to completely cover the fabric.
4. Coat the entire wall surface with R-GUARD Spray Wrap.
5. Similarly apply R-GUARD Joint Fabric over weep screeds, head flashing, roof sidewall step flashing and similar conditions and cover with R-GUARD Spray Wrap.