


**PROSOCO R-GUARD® Air & Water-Resistive Barrier
Rough Opening Preparation**

Detail No.: 20.23a

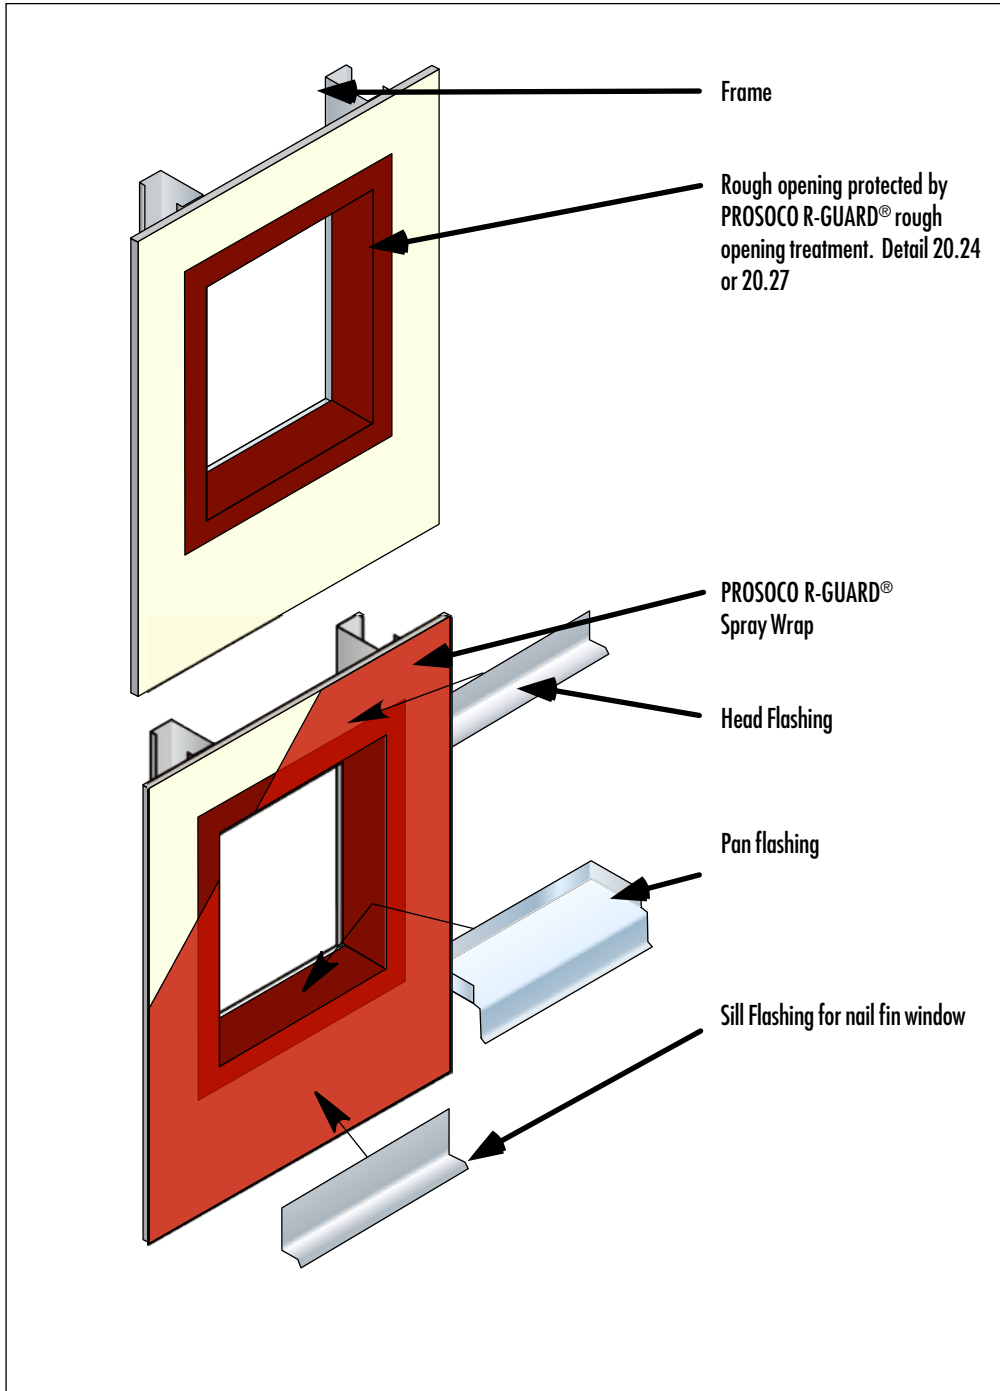

Notes:

Prepare opening prior to the installation of the window or mechanical equipment. Coordinate installation with other trades.

1. Wrap the rough opening as per Detail 20.24 or Detail 20.27

2. Once the rough opening treatment has dried, apply R-GUARD Spray Wrap to the rough opening and the entire wall surface.

3. Incorporate head flashing as noted in PROSOCO Detail 20.23b.

4. For box windows, incorporate a pan flashing as noted in PROSOCO Detail 20.23c.

5. For nail-fin windows, incorporate a sill flashing under the window as noted in PROSOCO Detail 20.23d.